## **Kenwood TK-860 Interface**

The following items are included in the Kenwood TK-860 cable interface kit:

- 1. Kenwood TK-860 interface cable assembly.
- 2. Instruction sheet.

The following steps outline the procedure for interfacing the Kenwood TK-860 radio to the Traklt-20.

1. Set the Traklt-20 up for a bench test and use the AVL Installer program to set the following operating constants in the installer table to the indicated value:

Transmit indicator active:

Receive indicator active:

High
PTT output active:

Enable mic mute gate on transmit:

Enable Tx indicator as event 2:

No
External output active:

High


External output mode: Speaker mute

2. Configure the following jumpers as indicated:


JP1 In JP4 B-C

- 3. On the Traklt-20 Board remove C58.
- 4. Install the KCT-19 accessory cable into the radio as specified in the radio manual.
- 5. Connect the interface cable between the radio's accessory connector and the Traklt-20.
- 6. Align Traklt-20 levels as described in Traklt-20 manual.

**NOTE:** If PL or DPL is used, cut yellow wire on accessory connector CN1. Solder and heat shrink a 6-inch piece of wire wrap wire to it. Solder the other end of the wire wrap wire to IC6 pin 3 under cover in radio as shown below.

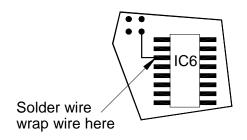

## Kenwood TK-860 Interface (cont.)

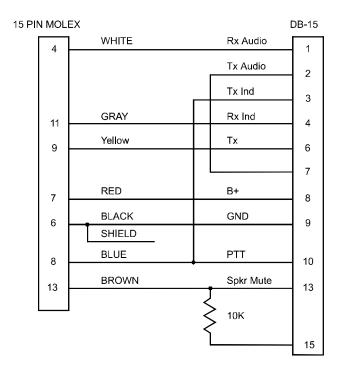

## **KENWOOD TK-860 INTERFACE CABLE KIT**

Item	Description	Part No.	Qty.
1	HEAT SHRINK TUBE 3/8	199-6099	1
2	SCREW/CLIP KIT	231-0014	1
3	MOLEX PIN MALE	231-0034	7
4	CONN DB15 MALE	231-0035	1
5	COVER DB15	231-0036	1
6	CONN 15 POS MOLEX	231-0054	1
7	10K RESISTOR	312-0011	1
8	10 COND CABLE	800-1115	6"