Kenwood TK-880/980/981 Interface

The following items are included in the Kenwood TK-880/980/981 cable interface kit:

- 1. Kenwood TK-880/980/981 interface cable assembly.
- 2. Instruction sheet.

The following steps outline the procedure for interfacing the Kenwood TK-880/980/981 radio to the Traklt-20.

- 1. The enclosed interface cable needs to have one pin installed in the appropriate location. This cable can be used for a variety of applications. For a Kenwood TK-840/940/941, install the loose pin (brown wire) into Pin 10 on the molex end of the interface cable (speaker mute). For a TK-880/980/981, the loose pin can be used for speaker mute or for data channel selection. Insert it into Pin 2 of the molex connector for speaker mute. Insert it into Pin 15 of the molex connector for data channel selection. If data channel selection is used, the Trakit-20 can automatically switch the radio to the system/group that has been designated for data. In data mode, the radio mutes the speaker automatically when the data system/group is selected. This is a function of radio programming. The desired system/group must be designated for data.
- 2. Set the Traklt-20 up for a bench test and use the AVL Installer program to set the following operating constants in the installer table to the indicated value:

Transmit indicator active:

Receive indicator active:

PTT output active:

Enable mic mute gate on transmit:

Enable Tx indicator as event 2:

No

External output active: *High/Low
External output mode: *Speaker mute/

Second PTT

*For speaker mute, use active **High**. For data channel selection (Second PTT), use active **Low**.

3. Configure the following jumpers as indicated:

JP1 Out JP4 B-C

4. Program the Kenwood TK-880/980/981 Optional Features for the following:

Com 2 (AuxHook / PTT)


Logic Signaling:

Squelch Logic Type Active Low
Squelch Logic Signal TOR
Access Logic Type Active Low
Access Logic Signal Continuous

Kenwood TK-880/980/981 Interface (cont.)

Install the Accessory Cable KCT-19 in the Kenwood TK-880/980/981.
 Insert the cable connectors in CN1, CN2, and CN3.

- ** R17 in the Kenwood TK-880/980/981 may need to be removed if the radio is an "early" version. (This needs to be done if the external PTT does not work.)
- 5. Connect the DB-15 end of the Kenwood TK-880/980/981 interface cable to the DB-15 connector on the back of the Traklt-20.
- 6. Connect the Molex plug end of the Kenwood TK-880/980/981 interface cable to the KCT-19 cable.
- 7. Check the Traklt-20's audio levels by performing the alignment procedure described in the Traklt-20 manual.

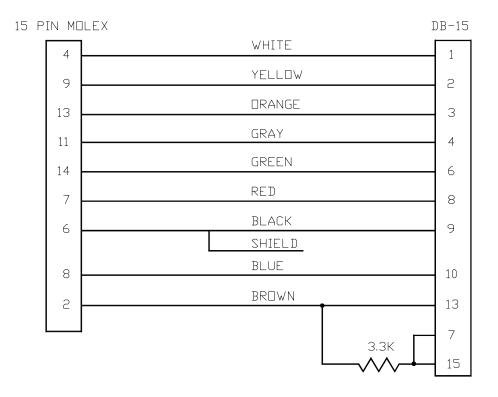

Kenwood TK-880/980/981 Interface (cont.)

KENWOOD TK-880/980/981 INTERFACE CABLE KIT 800-2080

Item	Description	Part No.	Qty.
1	HEAT SHRINK TUBE 3/8	199-6099	1
2	SCREW/CLIP KIT	231-0014	1
3	MOLEX PIN MALE	231-0034	7
4	CONN DB15 MALE	231-0035	1
5	COVER DB15	231-0036	1
6	CONN 15 POS MOLEX	231-0054	1
7	3.3K RESISTOR	312-0035	1
8	10 COND CABLE	800-1115	6"