

Motorola SYNTOR Interface

The following items are included in the Motorola SYNTOR interface kit:

1. SYNTOR interface cable assembly.
2. Cable tie.
3. Instruction sheet.


The following steps outline the procedure for interfacing the Motorola SYNTOR radio to the TrakIt-20.

1. Set the TrakIt-20 up for a bench test and use the AVL Installer program to set the following operating constants in the installer table to the indicated value:

Transmit indicator active:	Low
Receive indicator active:	Low
PTT output active:	Low
Enable Tx indicator as event 2:	No
External output active:	Low
External output mode:	Speaker mute


2. Configure the following jumpers as indicated:

JP1	Removed
JP4	B-C

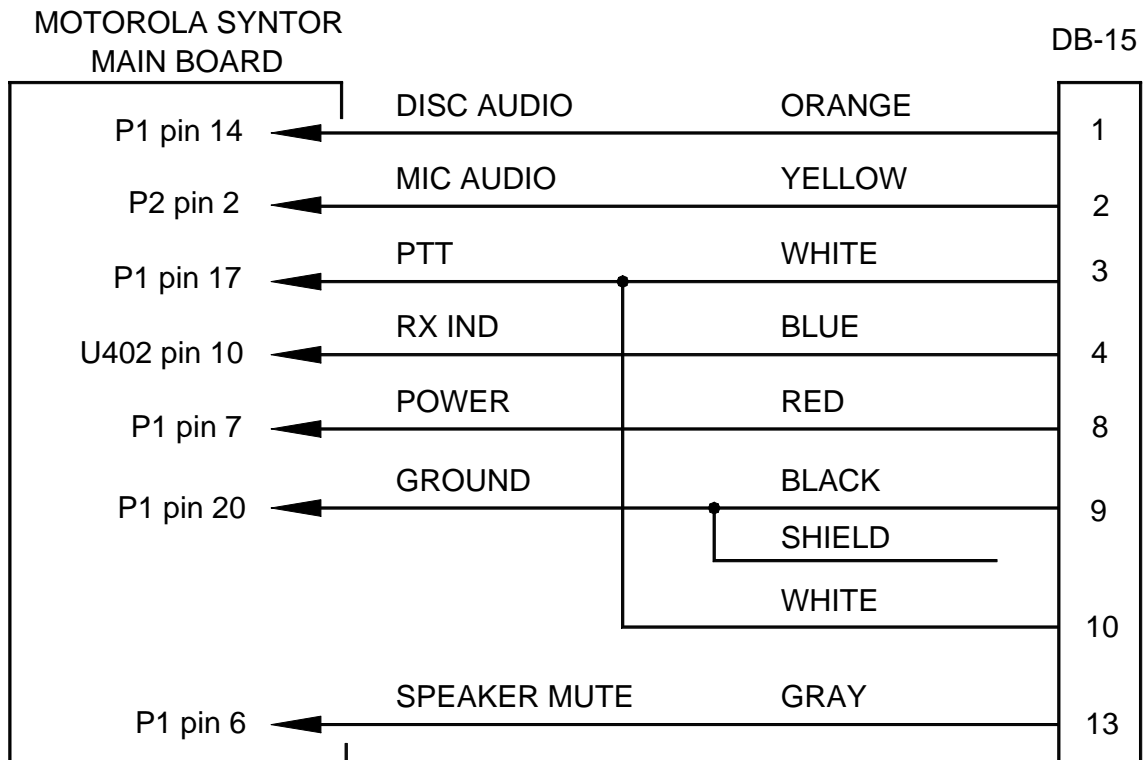

Motorola SYNTOR Interface (cont.)

3. Solder the SYNTOR interface cable wires to the MAIN BOARD as shown below.

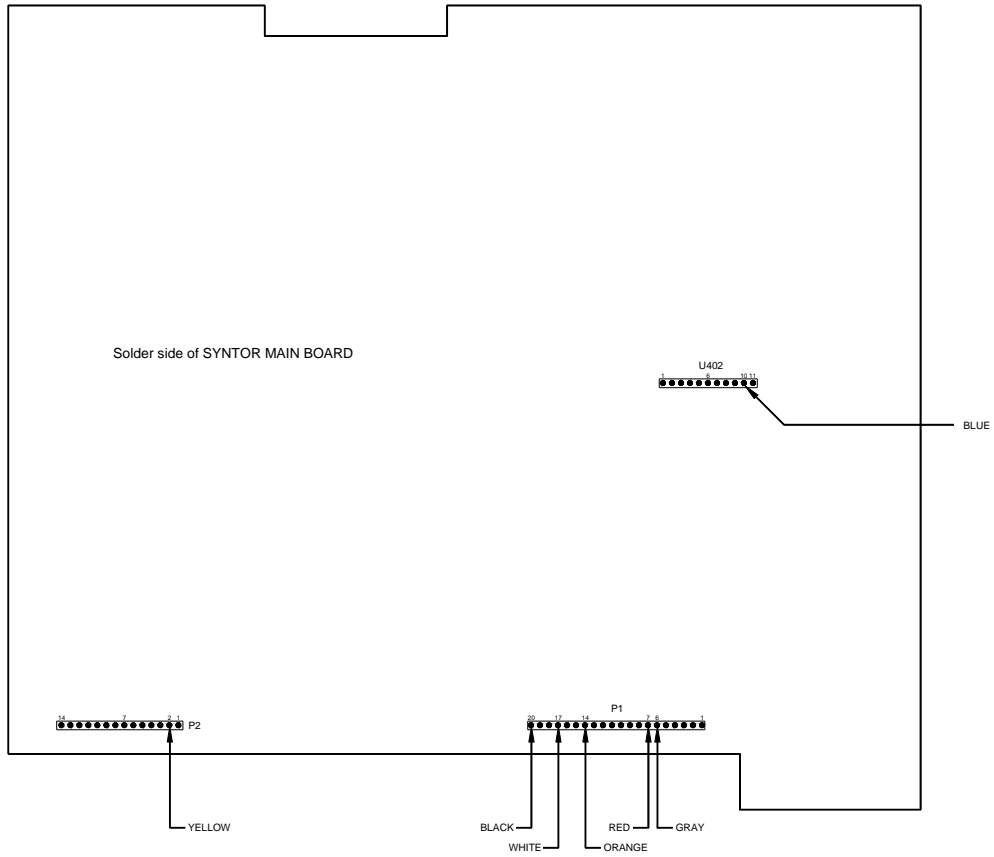

Motorola SYNTOR Interface Cable Kit 106-SPECTRA

Item	Description	Part No.	Qty.
1	CABLE TIE (SHORT)	200-0081	1
2	SCREW/CLIP KIT	231-0014	1
3	CONN DB15 MALE	231-0035	1
4	COVER DB15	231-0036	1
5	CABLE 10 COND. 24 AWG	800-1115	2'