


TRAKIT

TRAKIT SUPERVISOR MONITOR

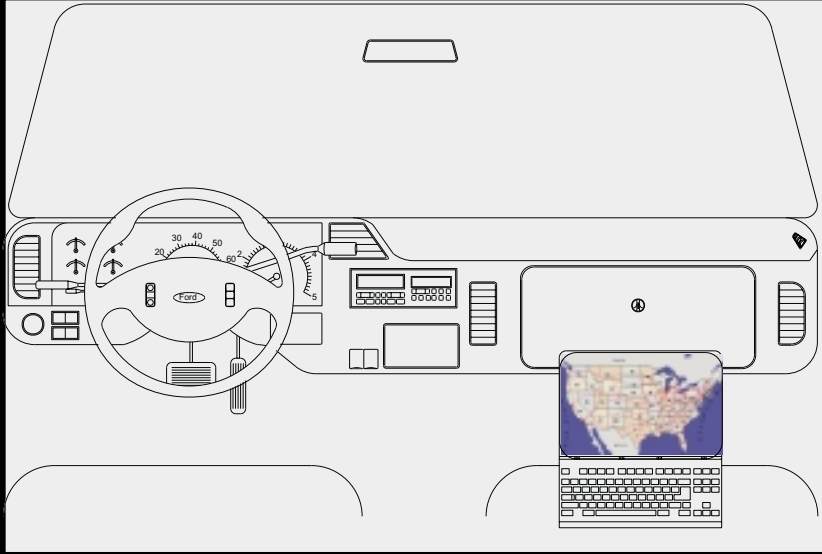

See where you are as well as where the other vehicles in the fleet are. This software installed in a notebook computer, attached to a vehicle TRAKIT unit, can show locations of all vehicles in the fleet, on a digital map. Tracking from the base dispatch station is monitored by the TRAKIT SUPERVISOR MONITOR. Extensive text messaging can be done between the dispatcher and the supervisor as well as between two supervisors. Supervisors can initiate location inquiries of other units in the fleet. The map includes the entire United States and Puerto Rico. Zone alerts, landmarks, map annotation and Point & click database management can be done independently of the dispatch station. The system is ideal for the supervisor in the field to monitor and direct activities of the entire fleet.

FEATURES

- See where you are as well as where the all of the other vehicles in the fleet are.
- Independently customize zone alerts.
- Complete United States map.
- Extensive pan and zoom utility with automatic follow of specified vehicles.
- Place custom landmark symbols and annotation on maps.
- Point & Click feature associates your custom database with landmarks.
- Drawing tool.
- Address search utility.
- Initiate location inquiries of other vehicles in the fleet.
- Record location data in computer files for future analysis or documentation.
- Play back activity on-screen on the digital map
- Extensive text messaging with dispatch station and/or other supervisors
- For use on conventional or trunked analog radio systems.